

IBM Storage FlashSystem® 5015 Installation Poster



Before installing the IBM Storage FlashSystem 5015 read the **IBM Systems Safety Notices** in the publications package.



Online Notices



How to

1. Get an IBM ID
2. Register the product
3. Subscribe for alerts
4. View IBM Documentation
5. Open a ticket
6. Get new code versions


1 Preparing for setup



Planning Worksheet



Phillips Screwdriver

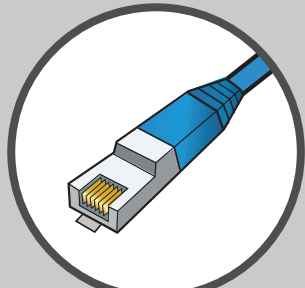


Ethernet Cable




Ethernet, DHCP



Power

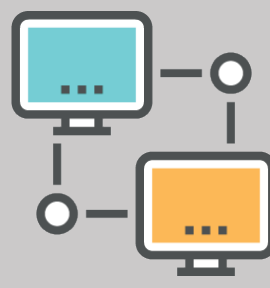


Network

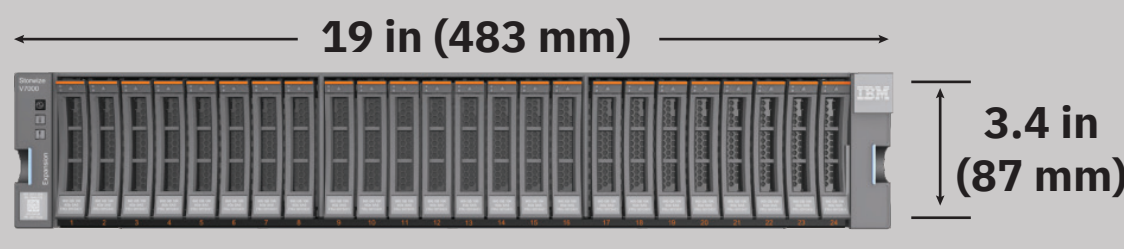





Rack Space

2 Verify the enclosure packages

* Control enclosure

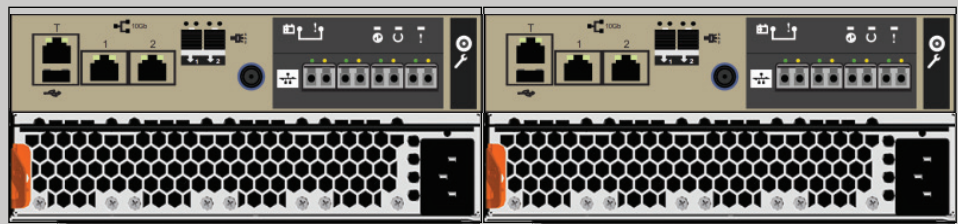




Hardware kit contains extra screws and pins for various rack types.

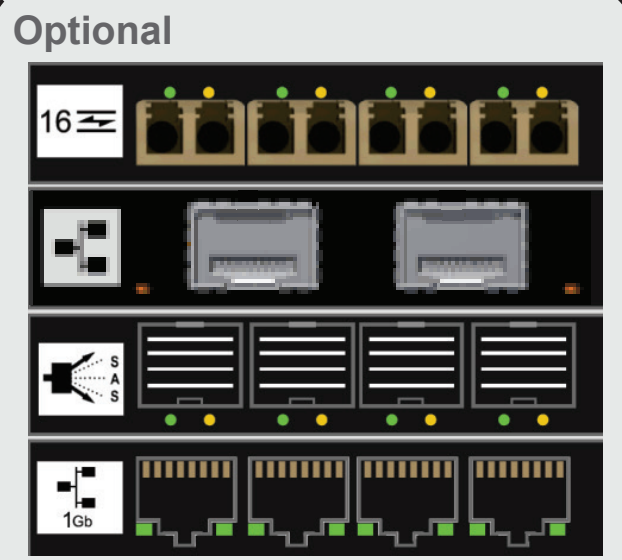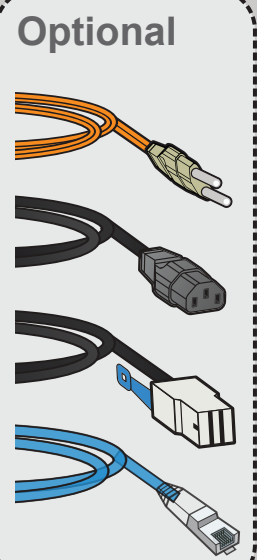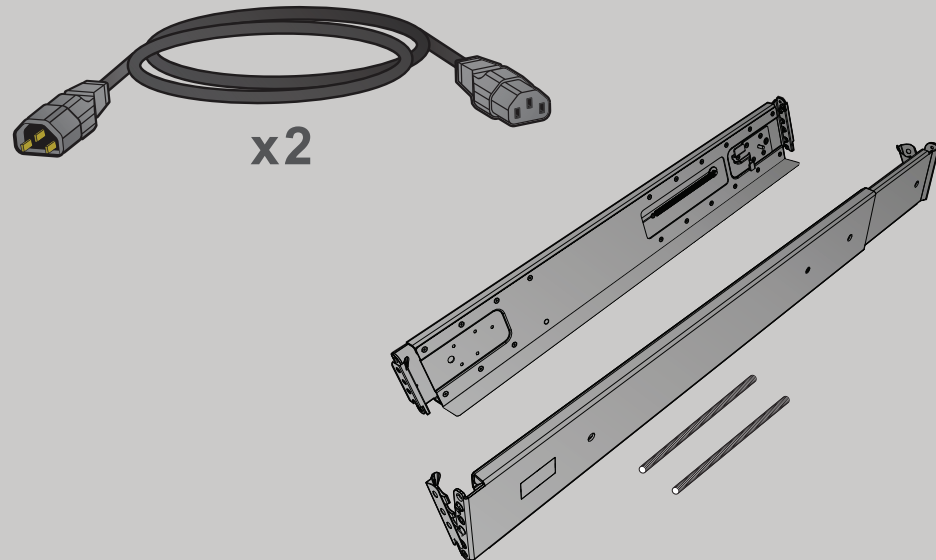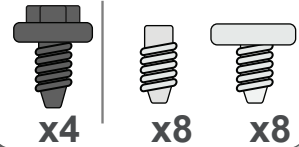








Expansion enclosure

Optional

Hardware kit contains extra screws and pins for various rack types.

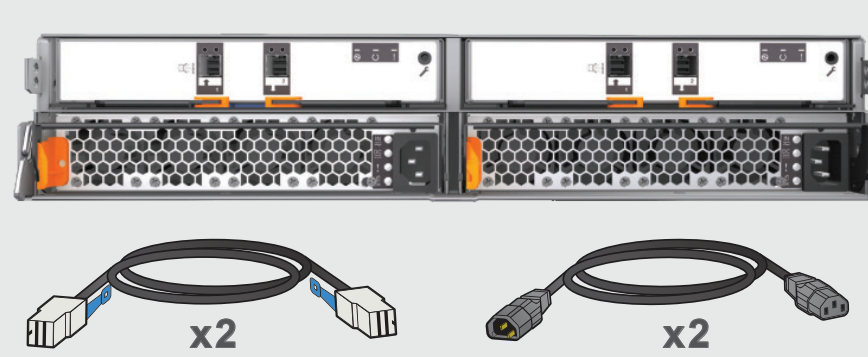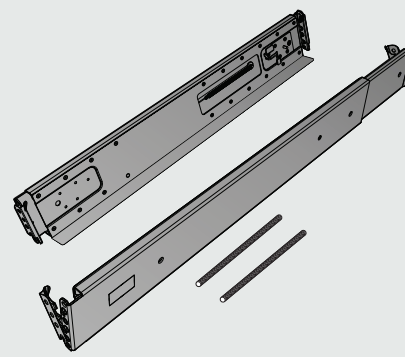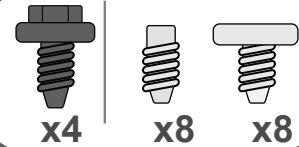


3 Install enclosures

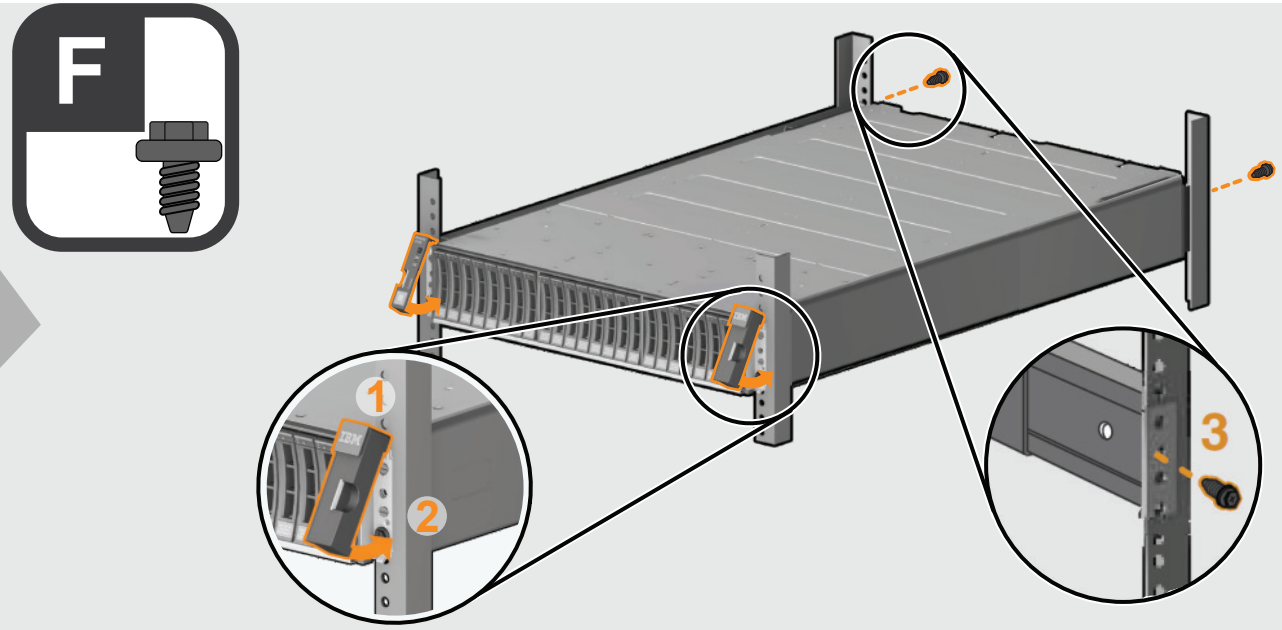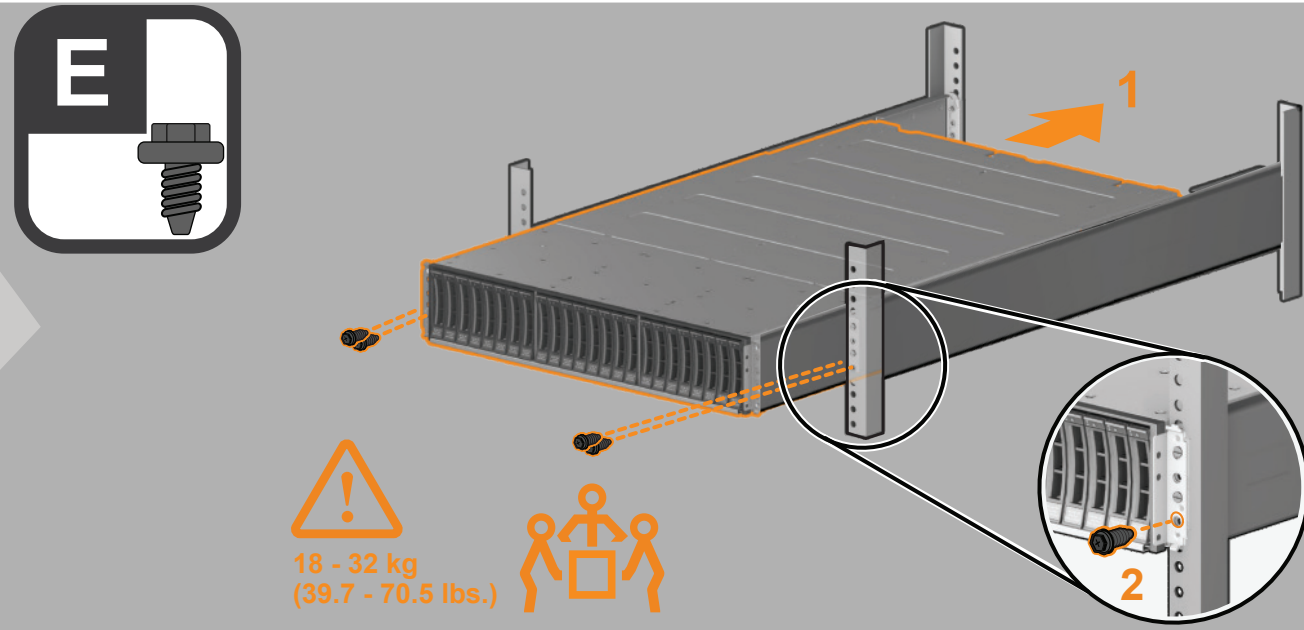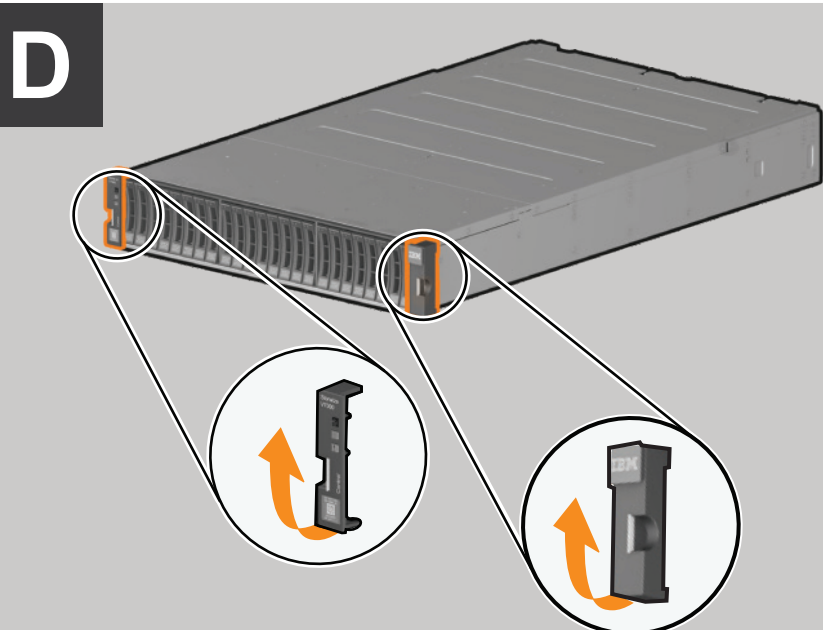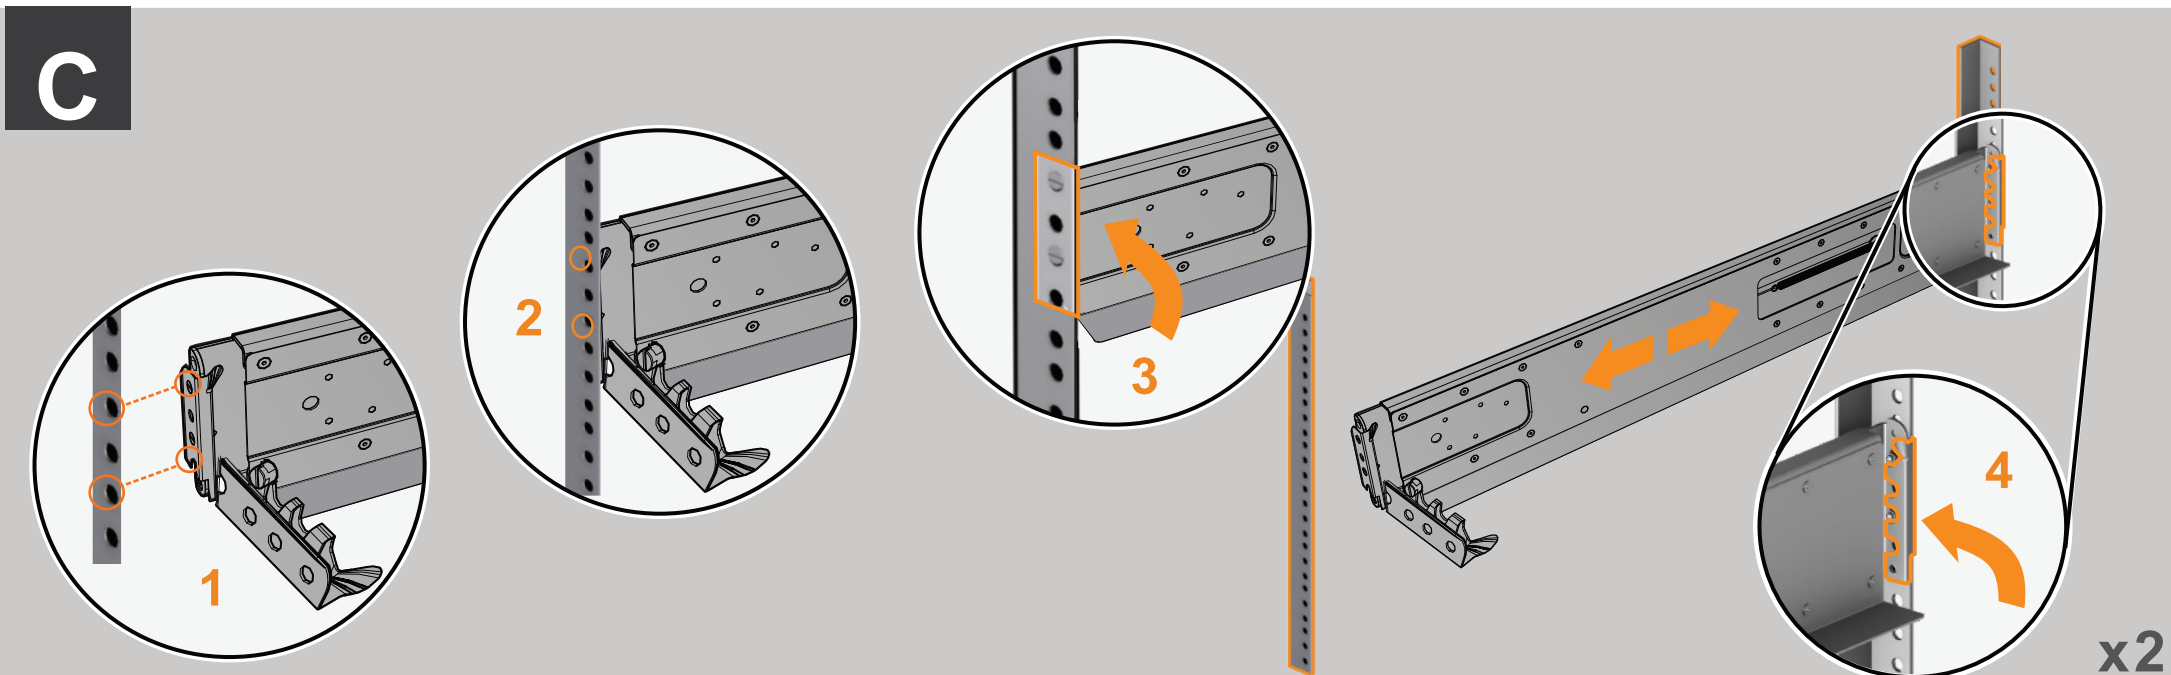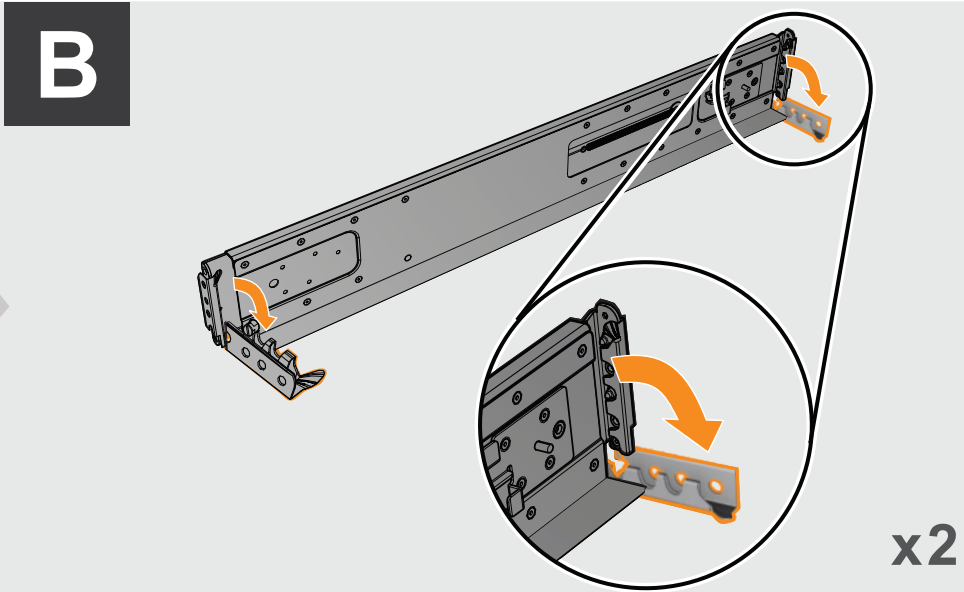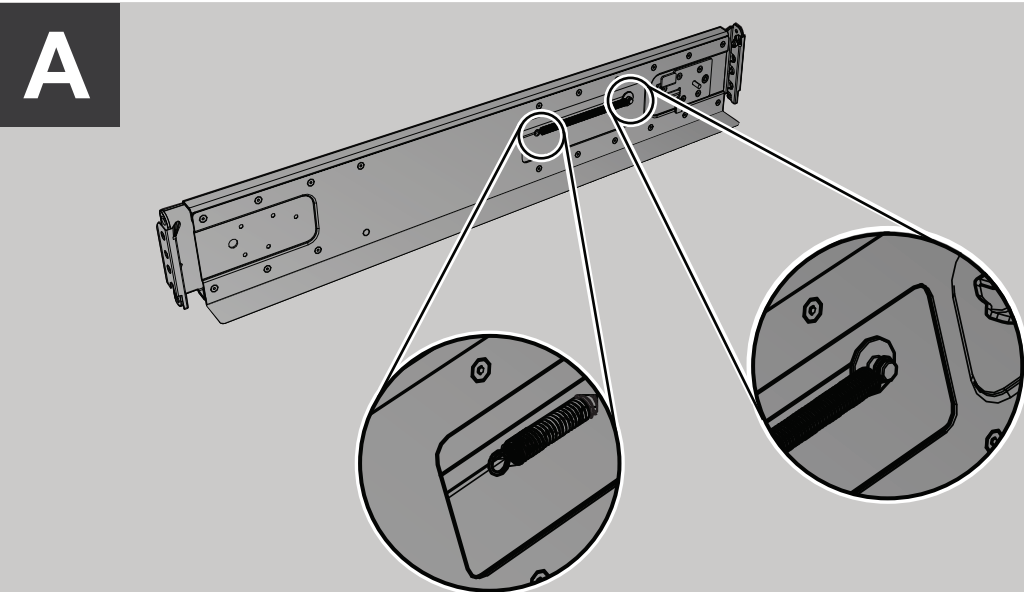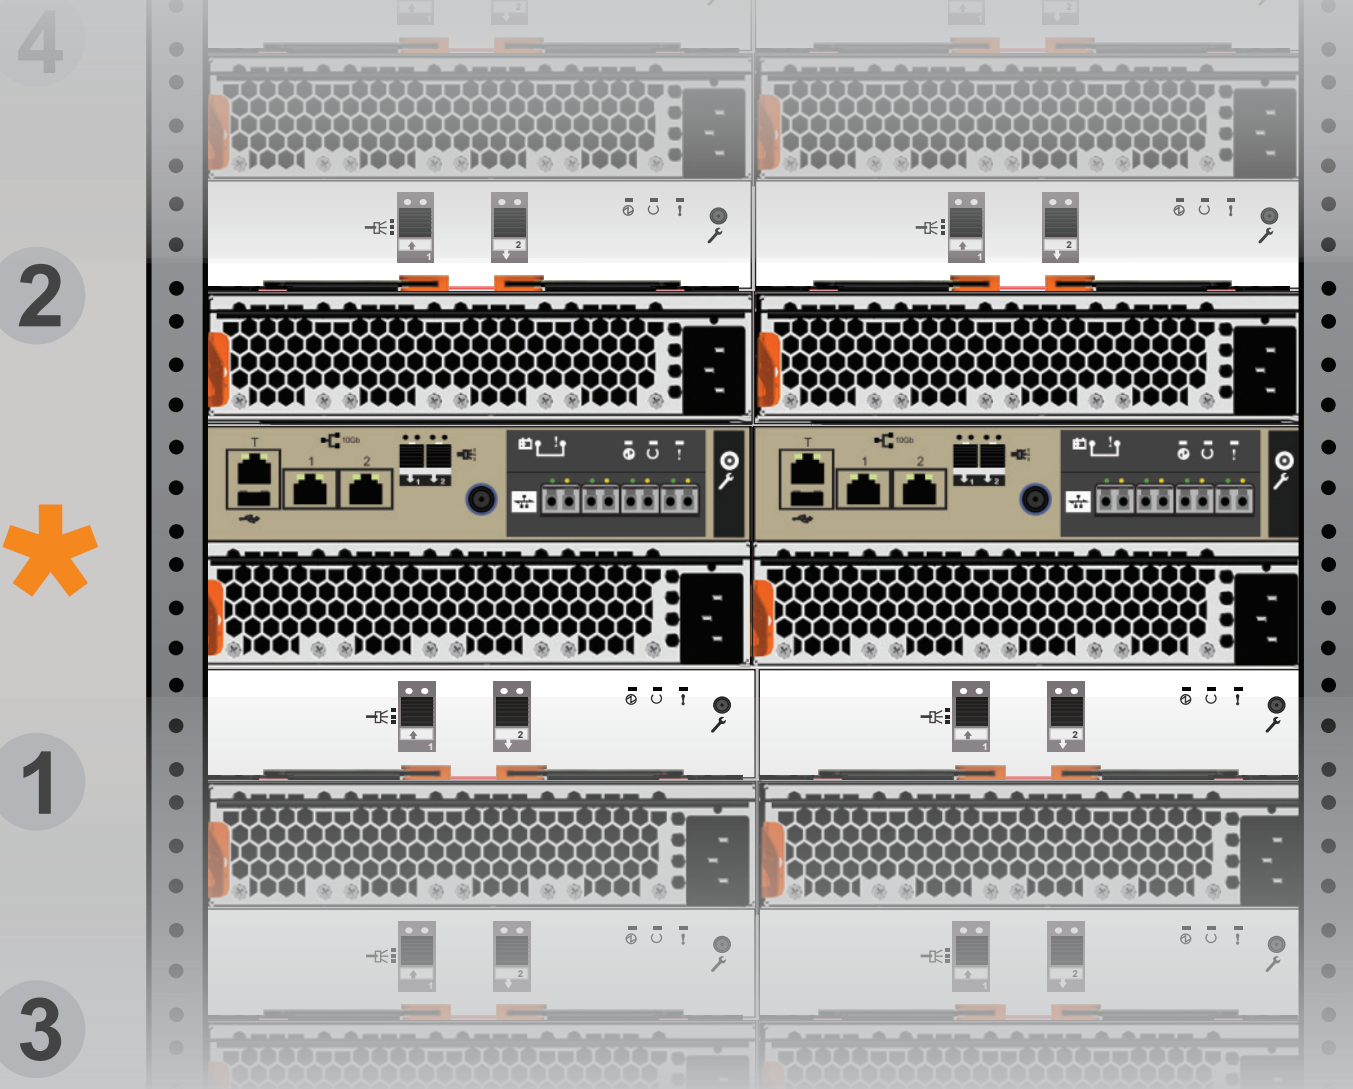


IBM Storage FlashSystem® 5015 Installation Poster

④ Connect cables

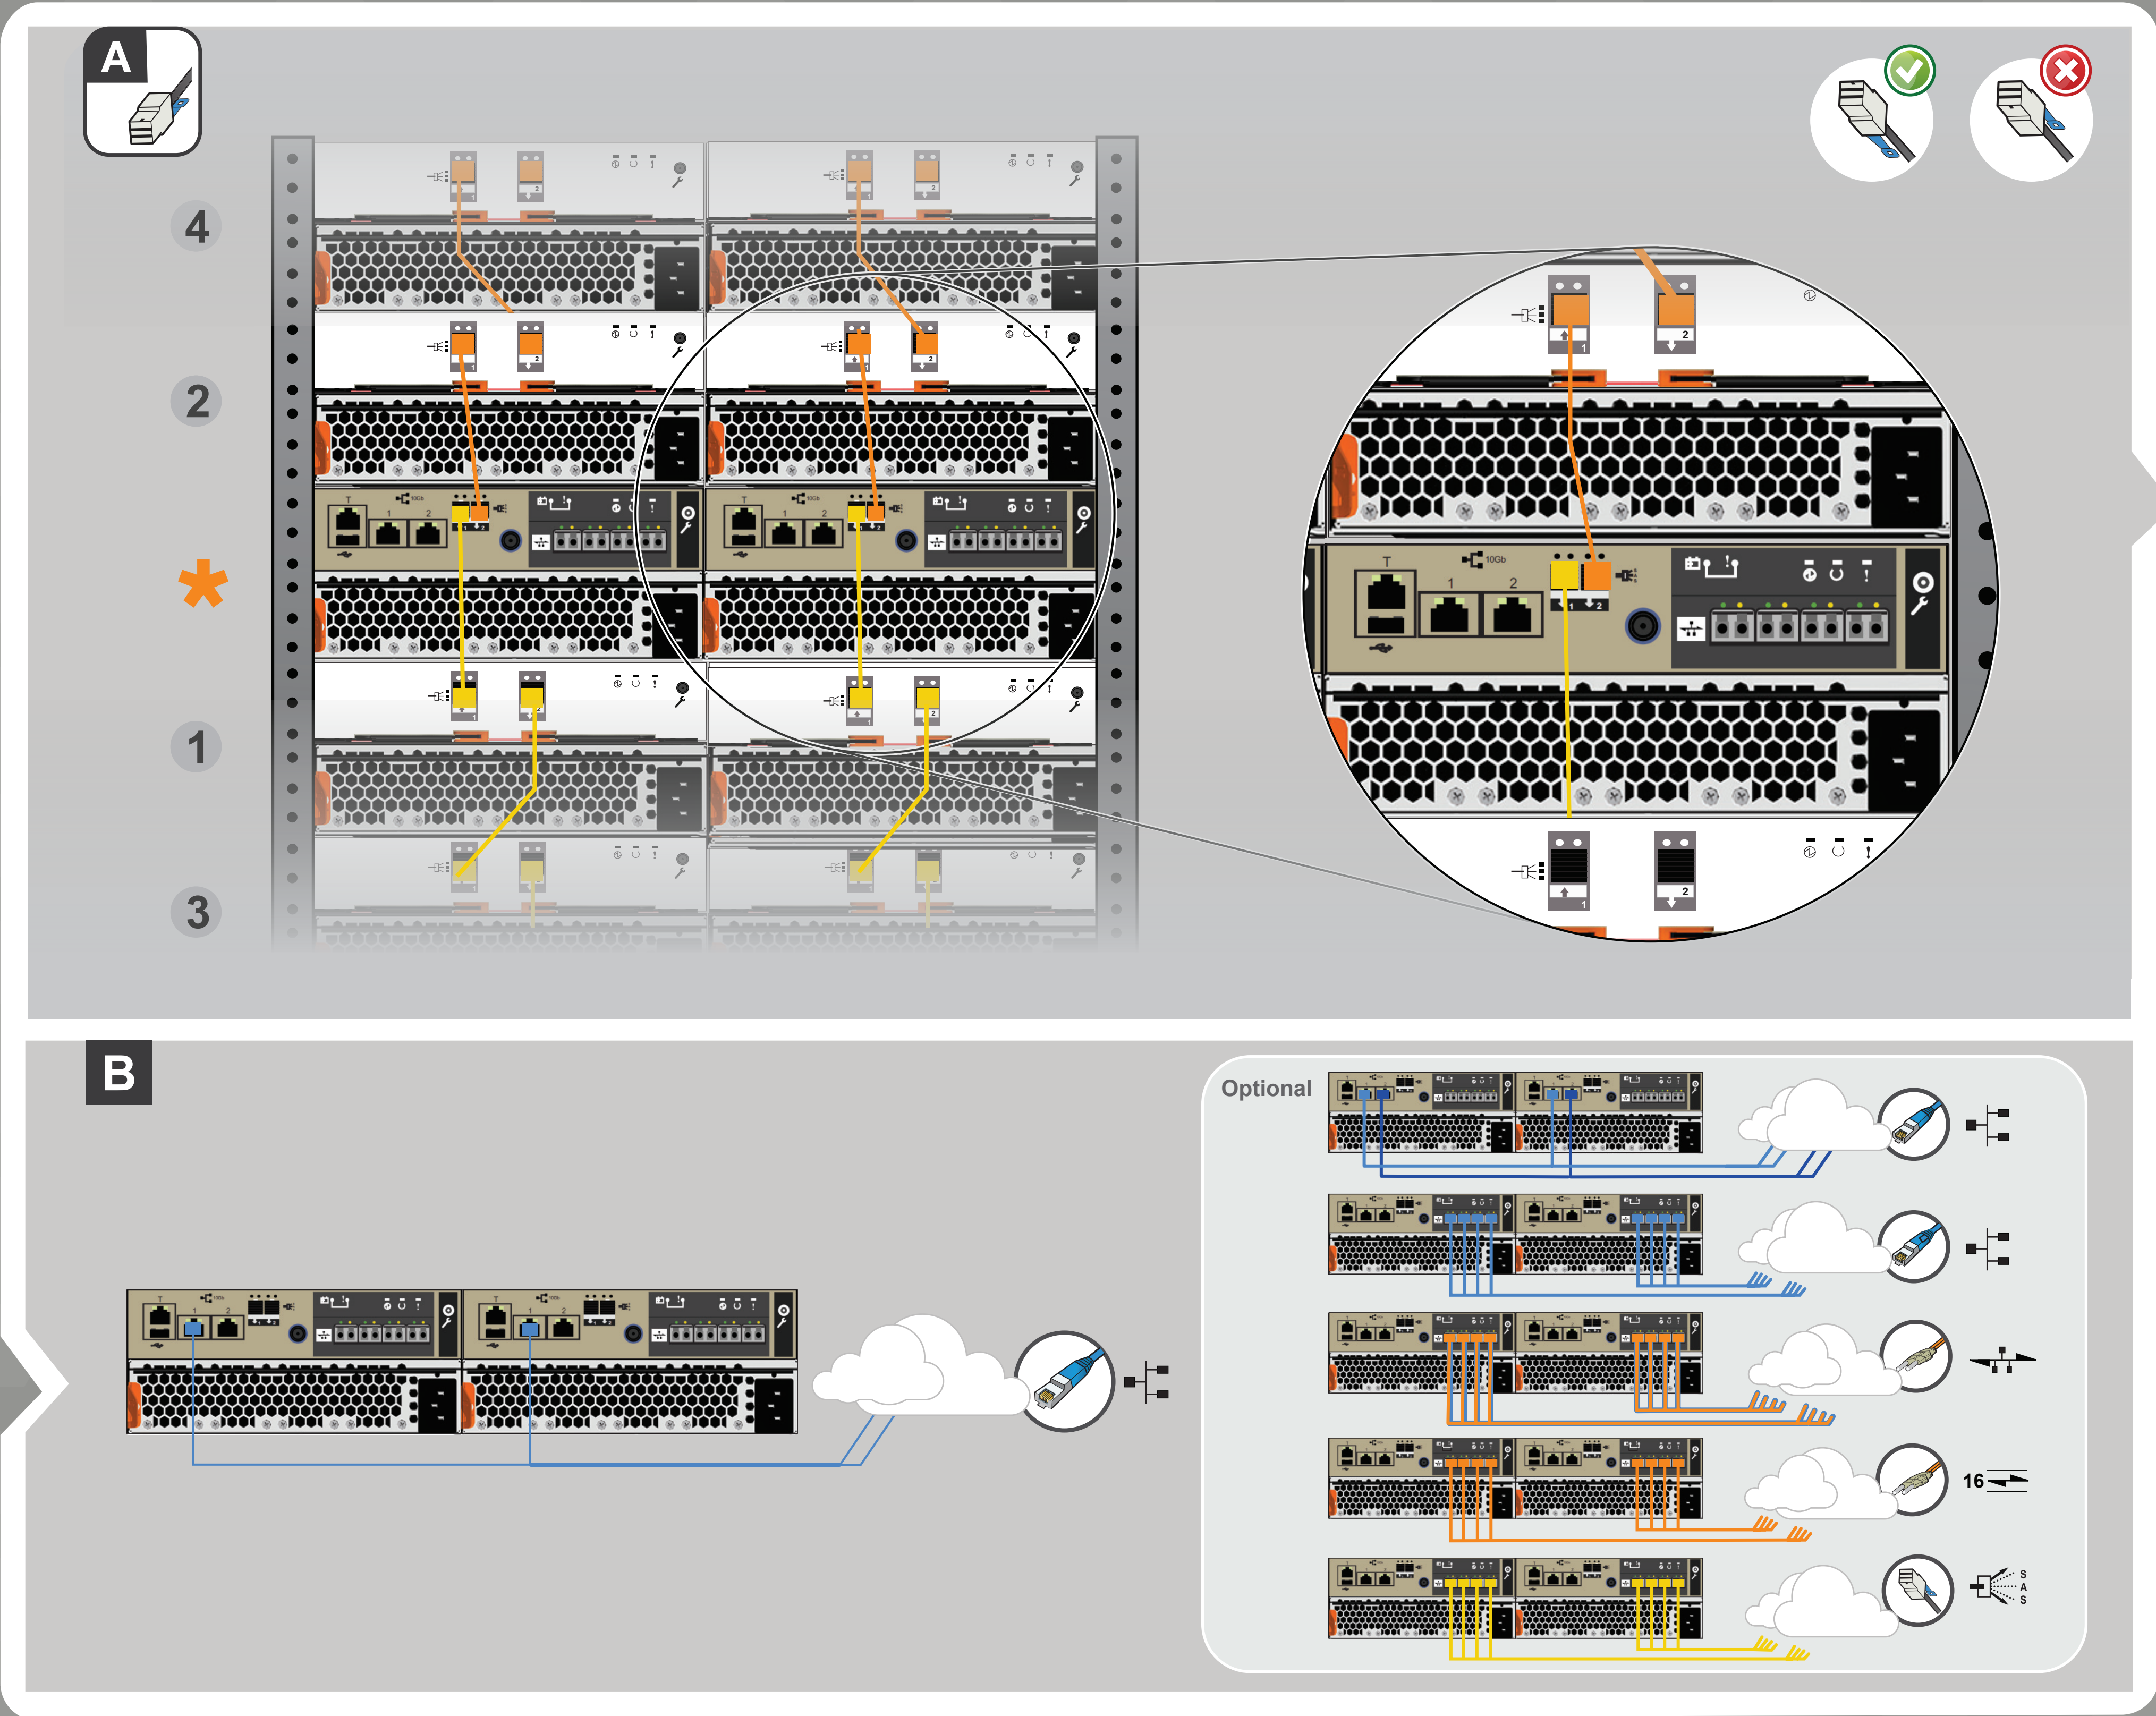

⑤ Power on

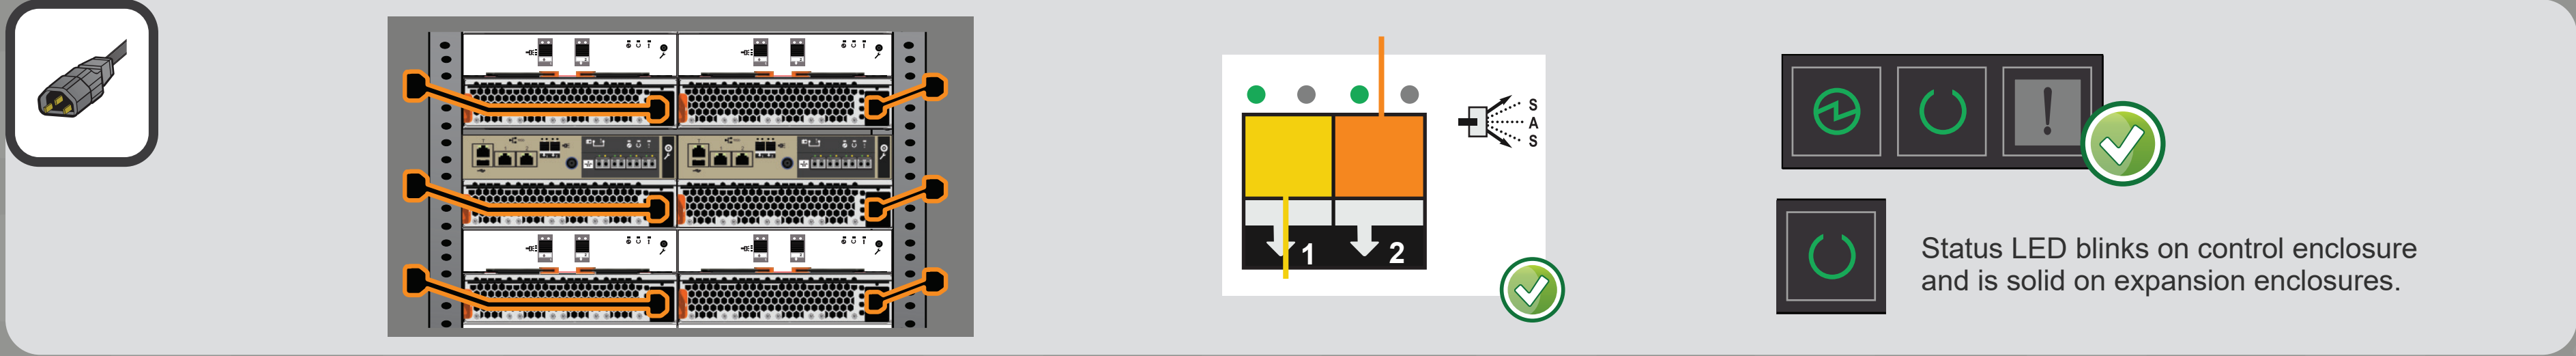

⑥ Set up the system



(1P) P/N: 03LG798

