

IBM TotalStorage
SAN Volume Controller



Planning Guide

Version 1.2.0
Errata May 5, 2004

About this guide

This guide provides errata information that pertains to the 1.2.0 release of the IBM TotalStorage Planning Guide.

This guide contains the corrections and additions on a per chapter basis. The chapter numbers in this guide correspond directly with the chapter numbers in the Planning Guide supplied with your SAN Volume Controller.

Who should use this guide

Before using the IBM TotalStorage SAN Volume Controller, you should review the errata contained within this guide and note the details with respect to the copy of the Planning Guide supplied with your SAN Volume Controller.

Last Update

This document was last updated : May 5, 2004

Contents

About this guide	3
Who should use this guide	3
Last Update	3
Contents	5
Chapter 6. Planning for your SAN Volume Controller configuration ..	7
Configuration rules	7
Storage subsystems	7

Chapter 6. Planning for your SAN Volume Controller configuration

The *RAID array restrictions:* section has been replaced as follows:

Configuration rules

Storage subsystems

RAID array restrictions:

For HP StorageWorks controllers only, a single RAID array must not be shared (by partitioning the RAID into many LUs) between a SAN Volume Controller and a direct attached host.

