




1 of 2




IBM Storage Virtualize™ family high density expansion enclosure

2072-92G / 2072-F92 / 4680-92H
2076-92G or 4664-92G
4657-92G
2145/2147-92F
9846/9848-A9F or 4666-A9F
4666-A9F / 4983-A9F


11 Install top cover

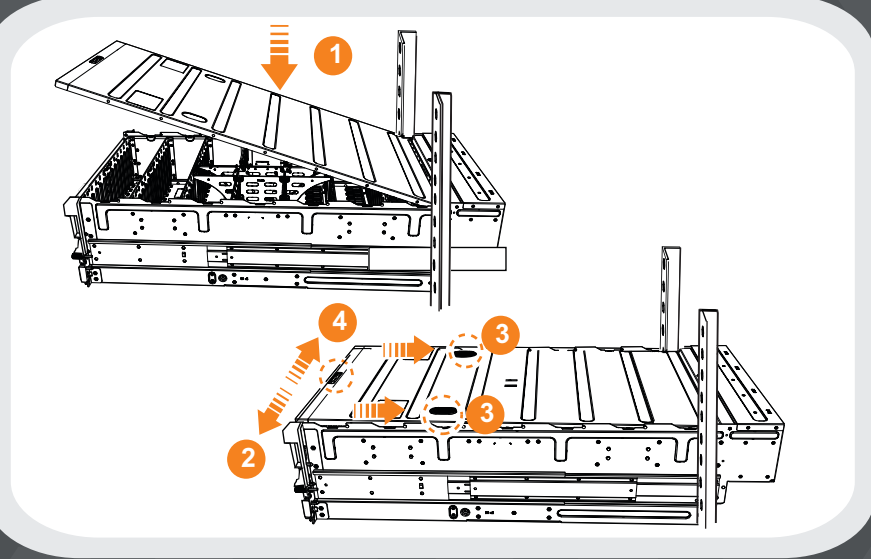

12 Slide enclosure into rack

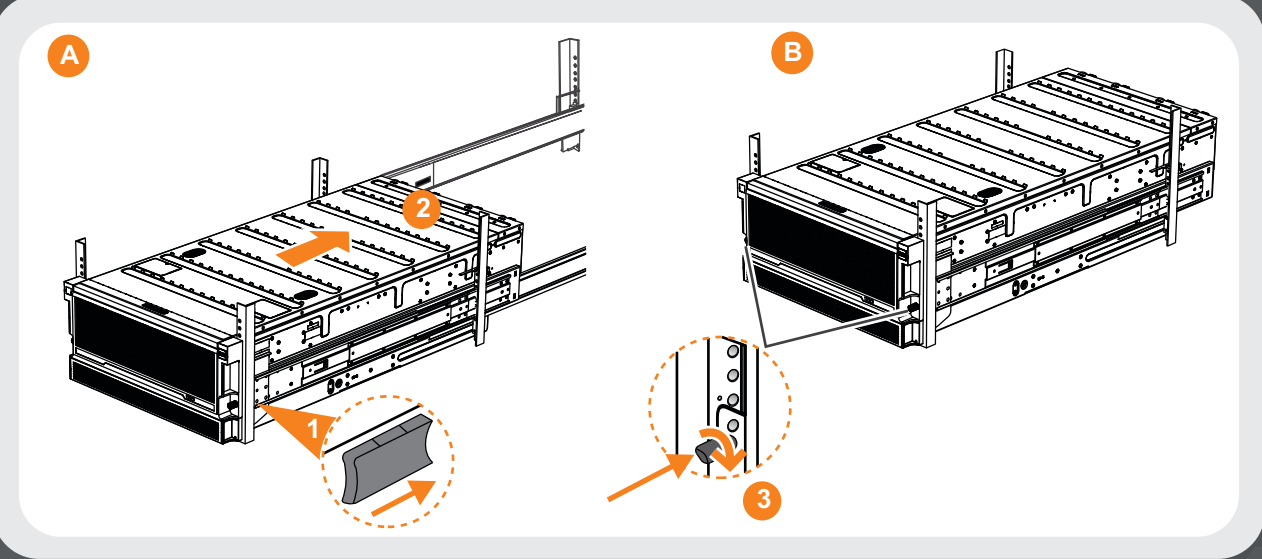


13 Install cable management arms

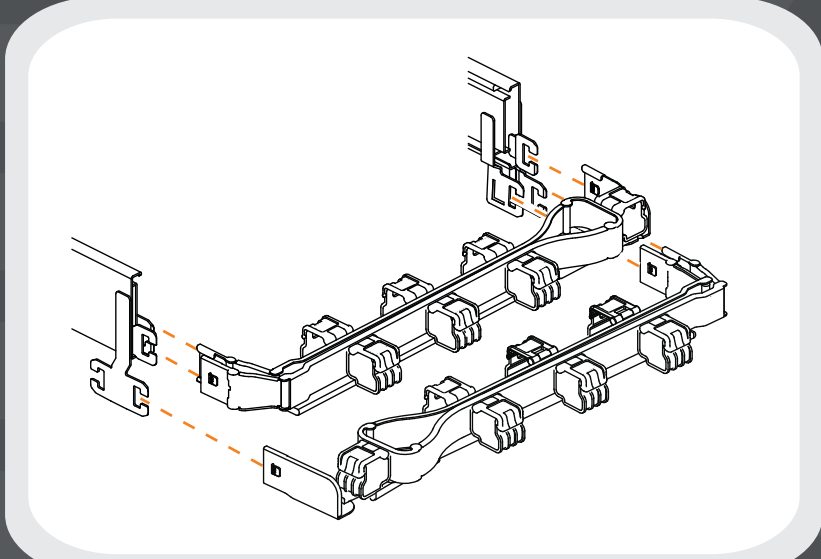


14 Connect SAS cables


A Connect SAS cables to enclosure

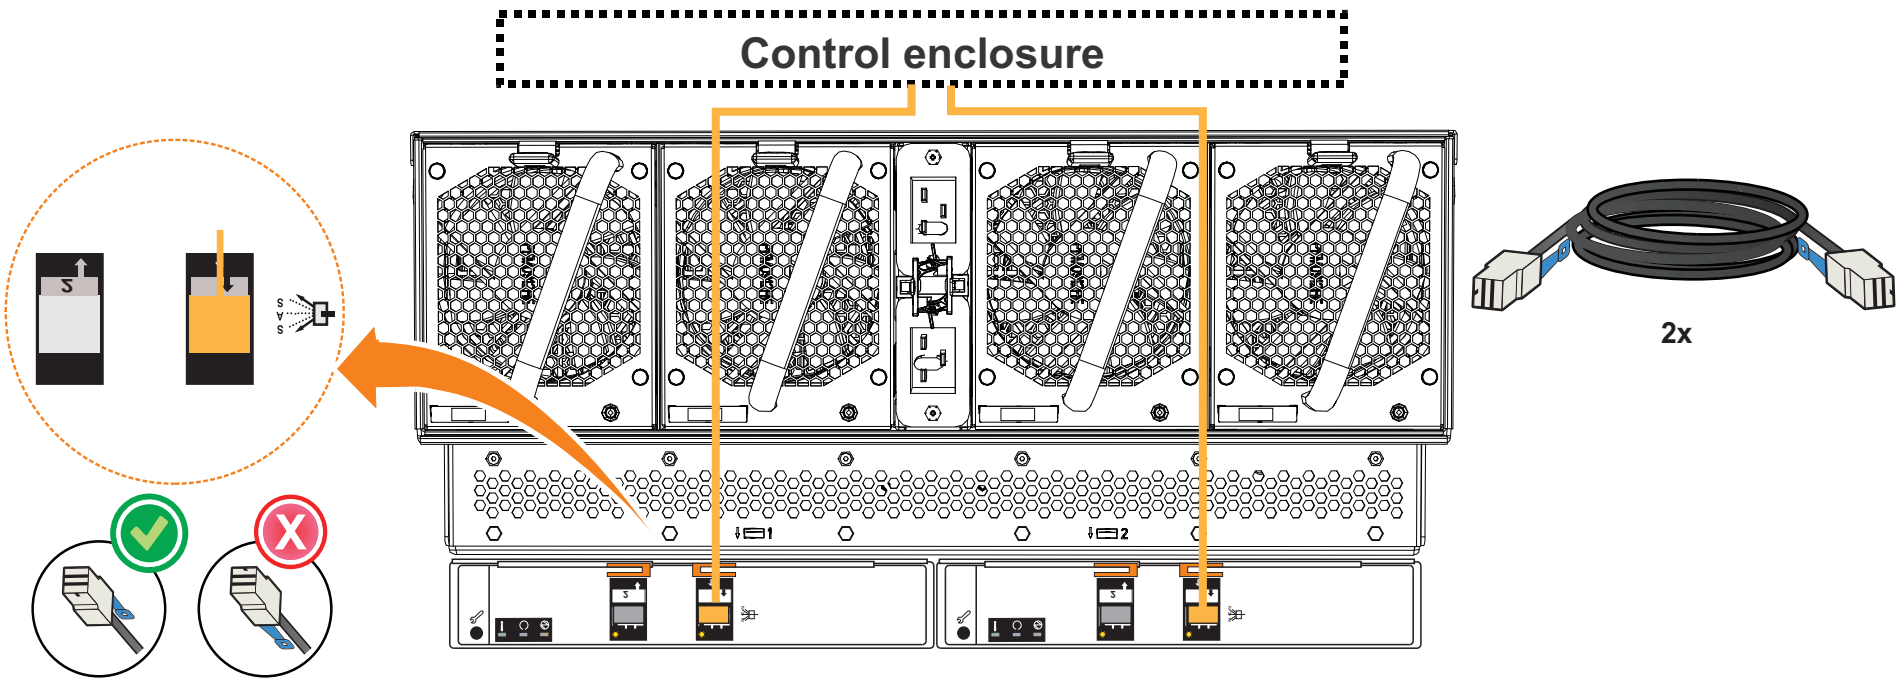


B Connect SAS cables to control enclosure

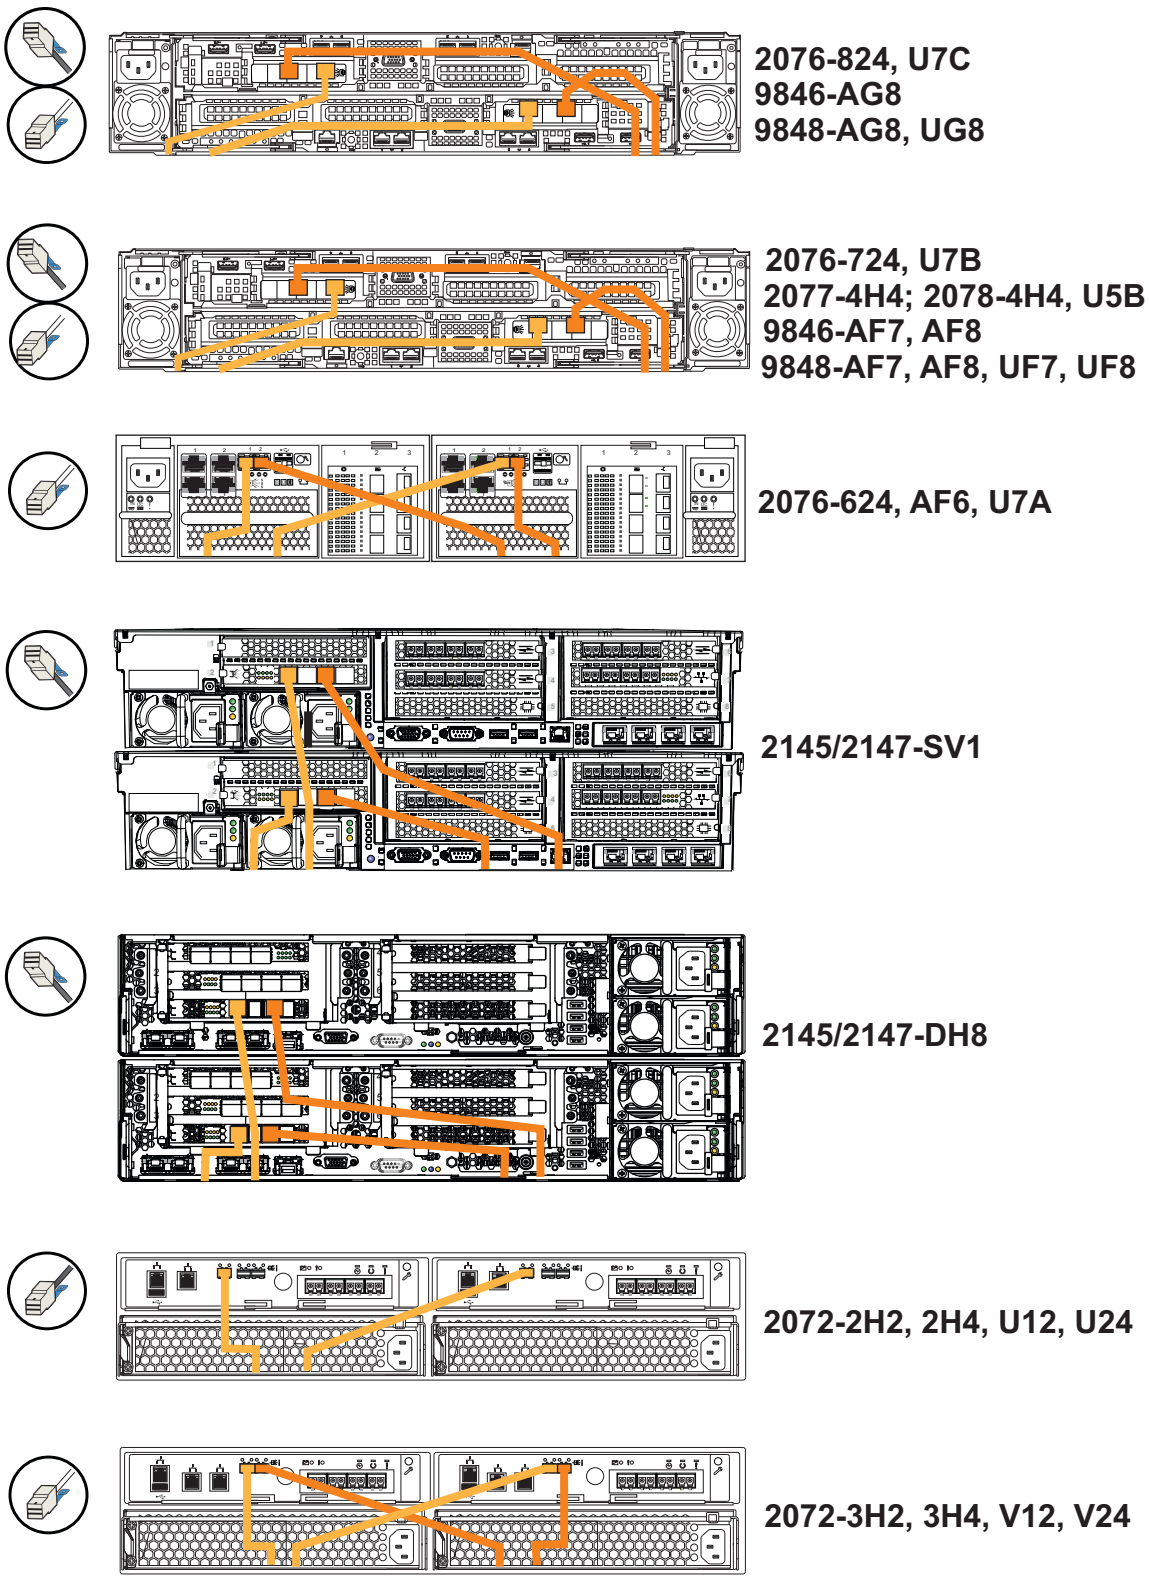


C Connect more expansion enclosures to SAS chain (optional, example)

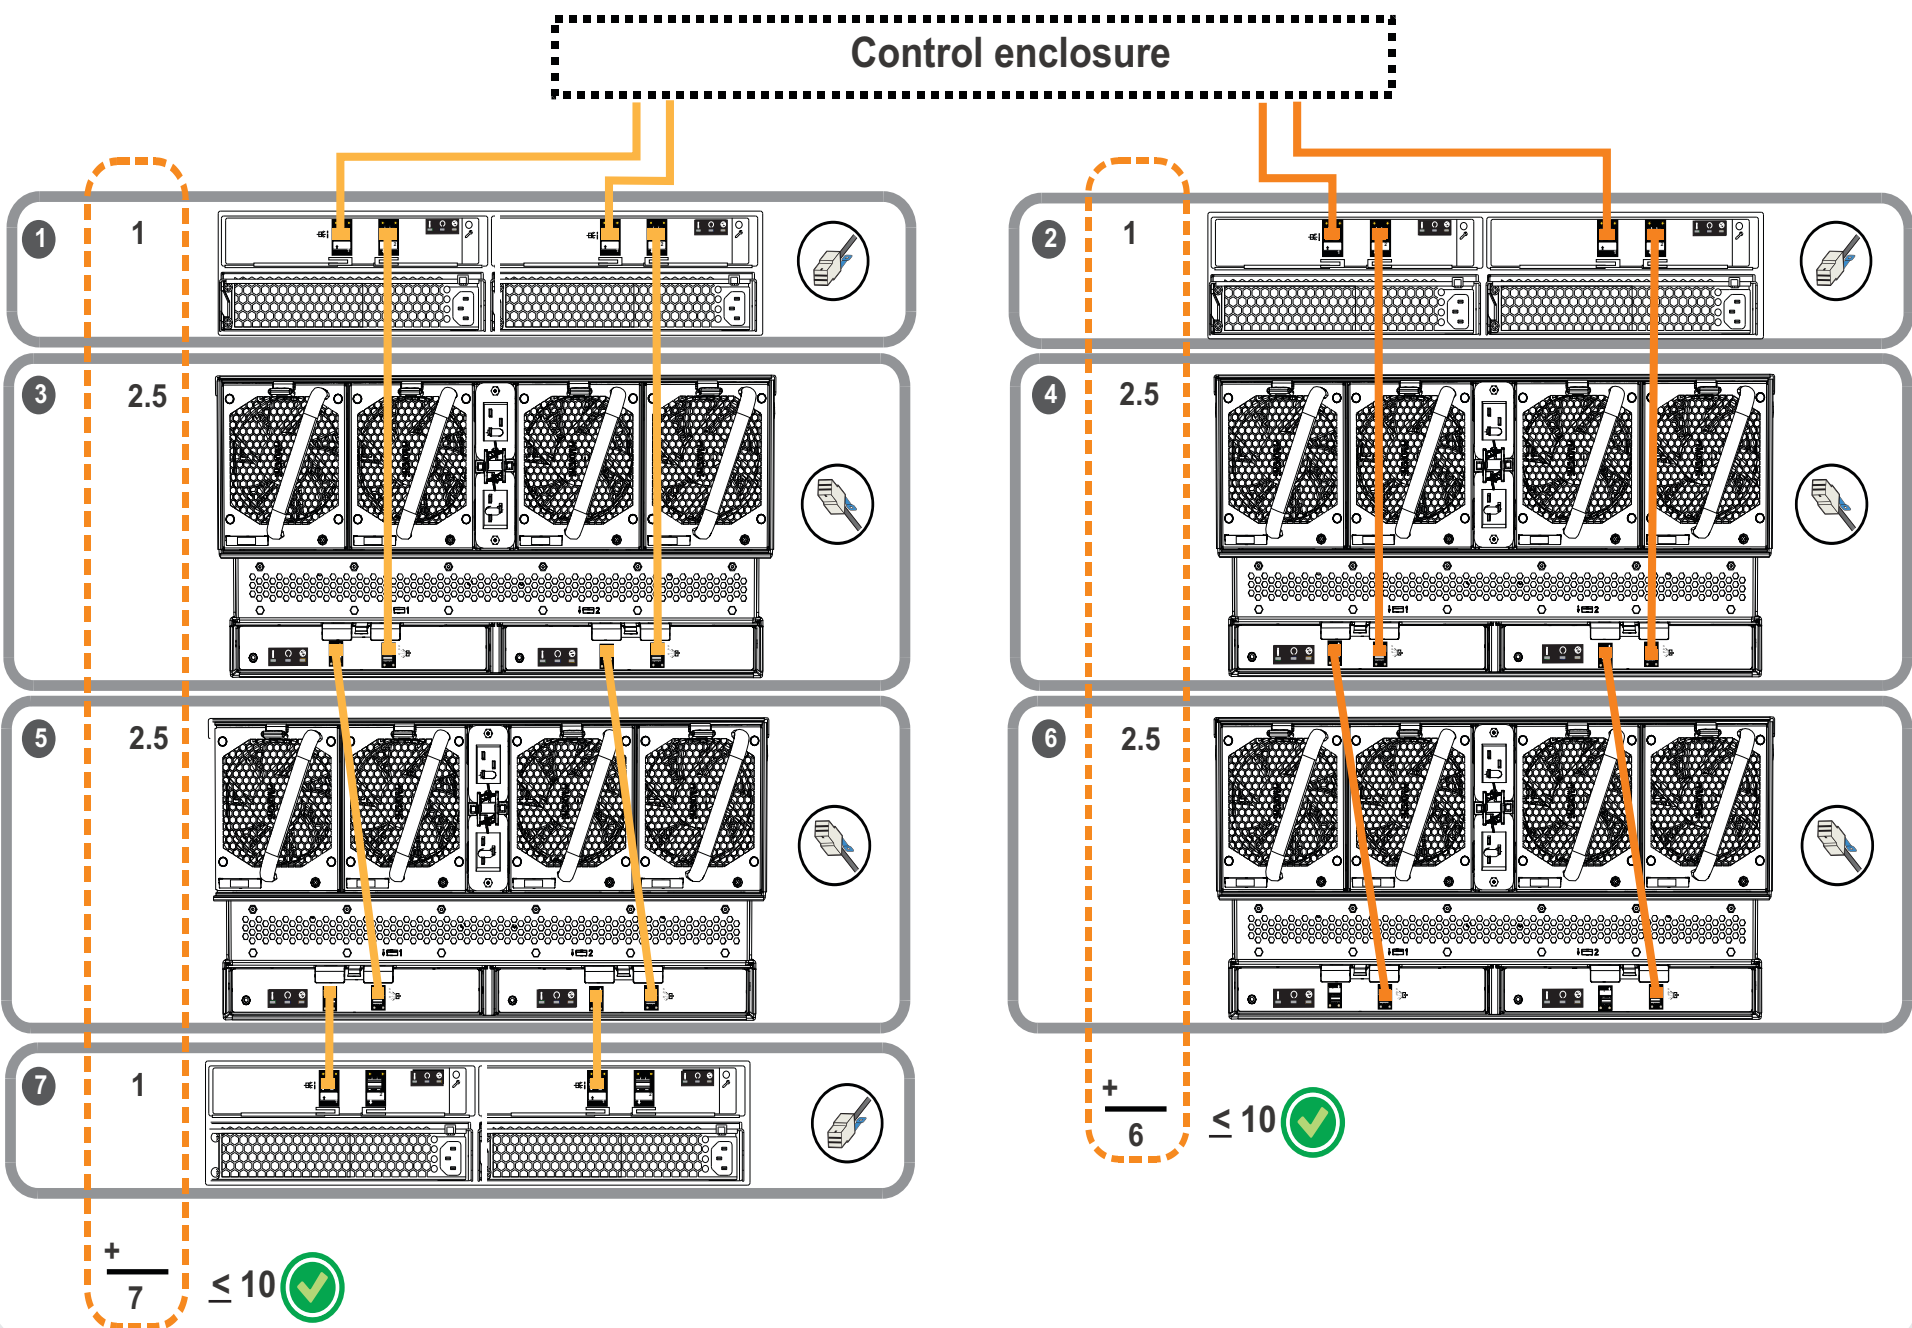


D Secure all SAS cables

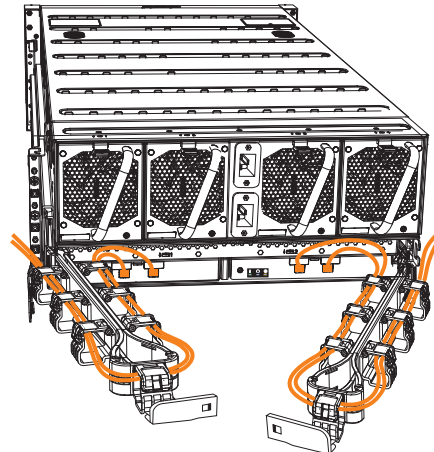


15 Connect and secure power cables

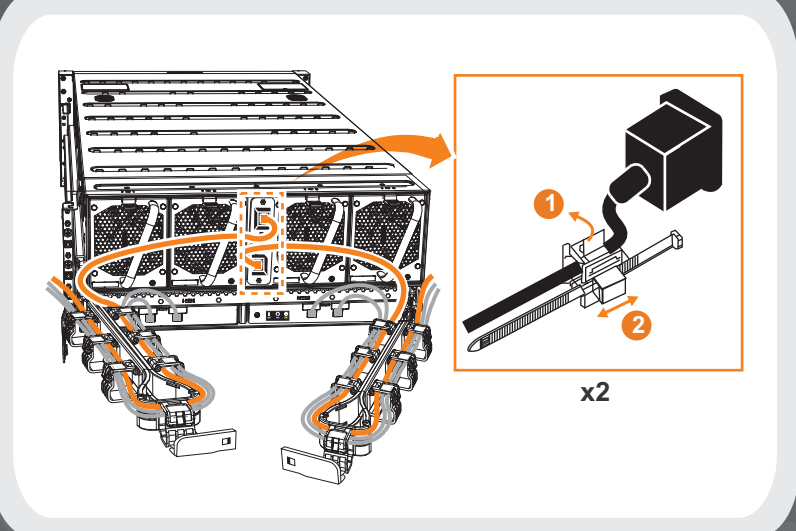

16 Reattach cable management arms

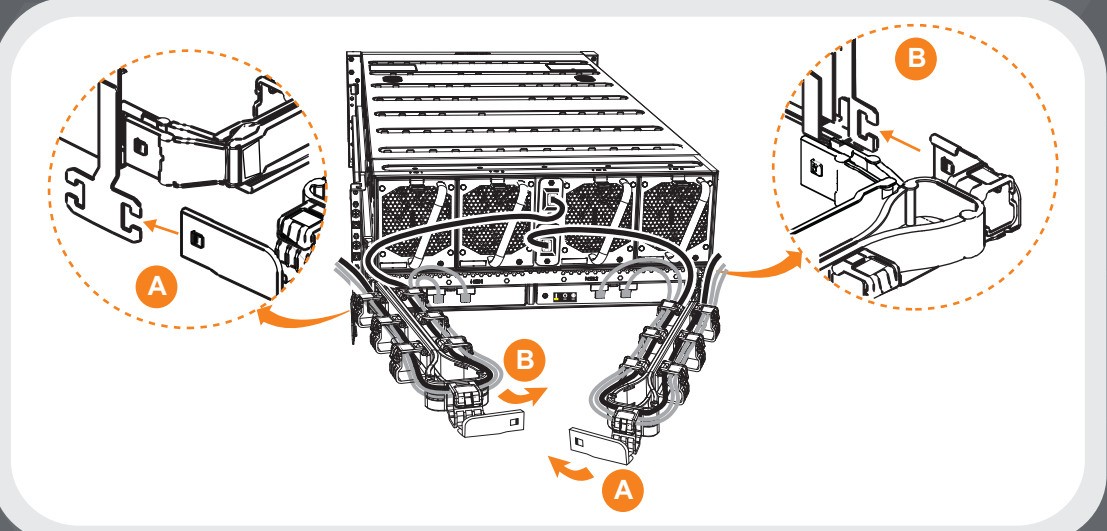

17 Verify power on

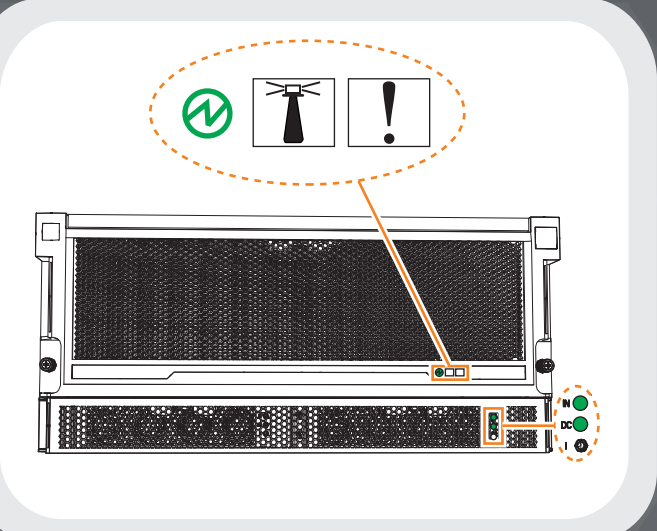

18 Verify configuration

